

STEP 3

Carefully turn the chair upright and place it in your room of choice.

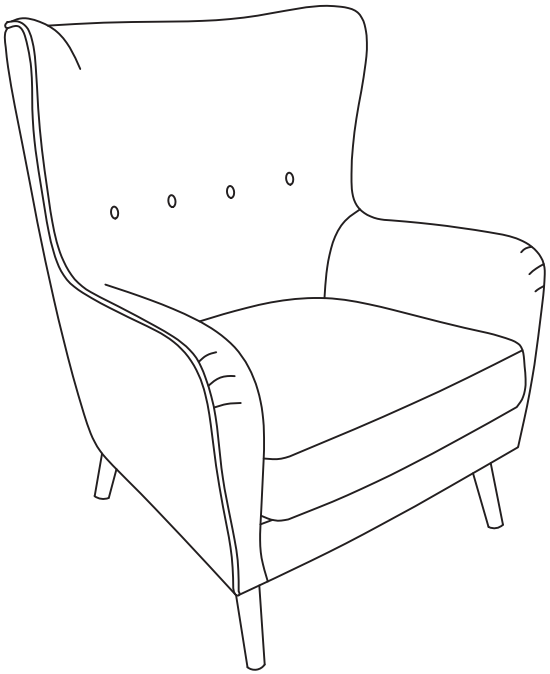

FABRIC CONTENT
MAIN FABRIC: 100% POLYESTER
OTHER FABRIC (NON-VISIBLE)
NON-WOVEN FABRIC: 100% POLYESTER

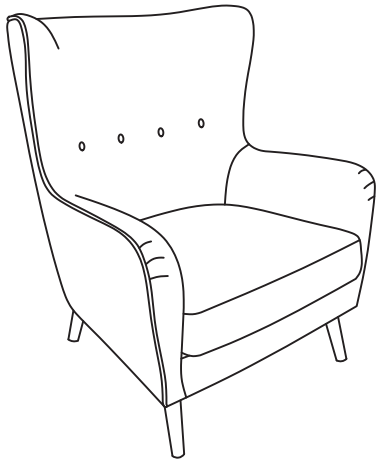

KY592 ARMCHAIR

Thank you for your purchase. The following care instructions will allow you to make the most of your chair; helping to prolong the look and life of it by preventing wear and damage.

IMPORTANT INFORMATION
PLEASE ENSURE YOU READ THIS LEAFLET BEFORE USING YOUR CHAIR. DO NOT DISCARD OF ANY PACKAGING UNTIL YOU HAVE CHECKED THE PRODUCT THOROUGHLY.

CARING FOR YOUR CHAIR

- Pre-brush fabric with a soft brush and then gently vacuum.
- Plump any accent/removable cushions regularly to prevent them becoming mis-shaped or flat.
- Use a microfibre cloth to remove dust from wooden surfaces.
- In the event of a spill or stain, use specialist upholstery cleaner or cleaning services.

SUNLIGHT AND HEAT DAMAGE

- Avoid contact with direct sunlight. If needed move items or change their position to avoid the same area being exposed to repeated sunlight/heat.
- Do not place your chair close to fire places and/or radiators.
- Hot objects such as mugs/plates can permanently mark the fabric and wood, avoid placing these on the chair.

- Do not allow children or pets to climb or jump on the chair.
- Avoid contact with sharp objects such as buckles, toys and jewellery as these can easily snag, tear and/or pull the fabric.

ENTRAPMENT WARNING

- Avoid the risk of entrapment by using the chair as intended; sitting facing forward on the seat.

PARTS LIST


IMAGE	DESCRIPTION	PART NO.	QTY
	Seat	A	I
	Leg	B	4
	Wooden Dowel	C	4
	Bolts	D	4
	Spring Washer	E	4
	Flat Washer	F	4
	Felt Cushion	G	4
	Allen Key	H	1

ASSEMBLY INSTRUCTIONS

Unpack your chair and check that all the parts on the Parts List are present. If any are missing, please contact the retailer from whom you purchased the product.

STEP 1

Parts can be found in the zipped compartment underneath the seat. Insert the wooden dowel (C) into the hole of the leg (D), then insert the leg into seat (A), and tighten it with screws (D), (E), (F), and wrench (H). Repeat for all legs.

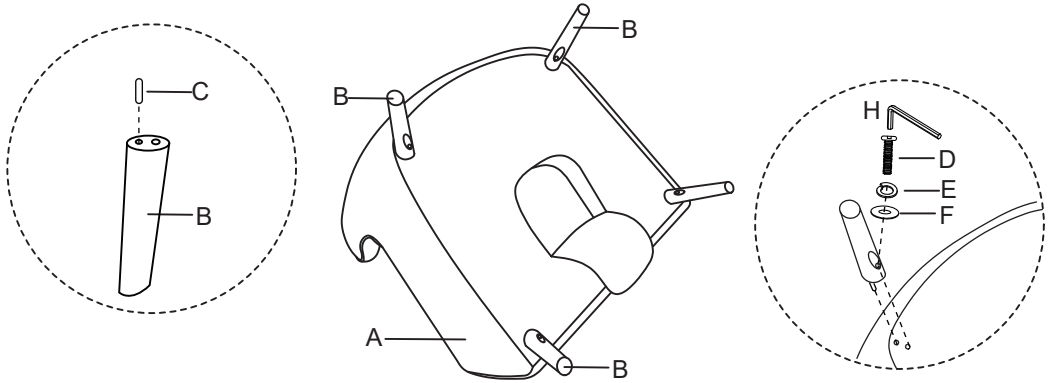

STEP 2

Close the zip compartment under the seat. Remove the backing of the felt cushions (G) and apply one to each of the chair legs. Press firmly to secure.

