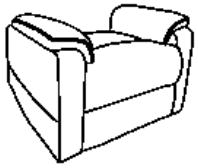

SAFETY WARNINGS

- Do not allow children or pets to climb or jump on the chair.
- Avoid contact with sharp objects such as buckles, toys and jewellery as these can easily snag, tear and/or pull the fabric.
- Avoid the risk of entrapment by using the chair as intended; sitting facing forward on the seat.
- Keep small parts away and out of reach of children and pets.

PARTS LIST


IMAGE	DESCRIPTION	PART NO.	QTY
	Seat	A	1
	Back	B	1
	Adapter	C	1
	Plug	D	1
	Controller	E	1

ASSEMBLY INSTRUCTIONS

Unpack your chair and check that all the parts on the Parts List are present. If any are missing, please contact the retailer from whom you purchased the product.


STEP 1

Insert the chair back into the chair base, make sure the slots on the back are fully fitted to the bottom part.

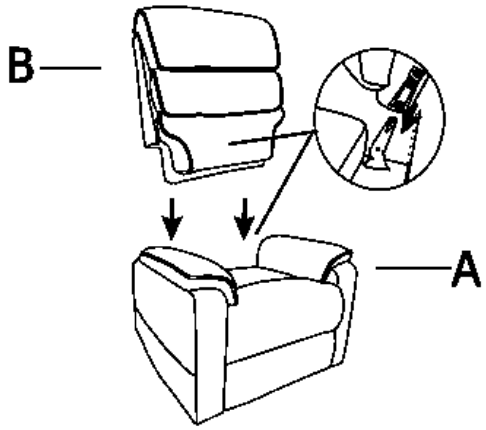


STEP 2


Stick the velcro on the backrest to the seat frame.

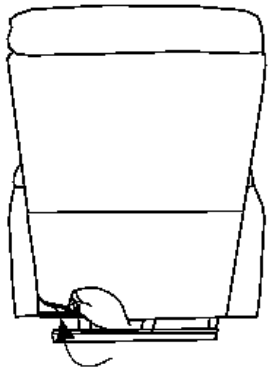

STEP 3

Connect the adapter,plug and controller to the motor adaptor wires which are simply fixed on the rear rail at the bottom of the seat.

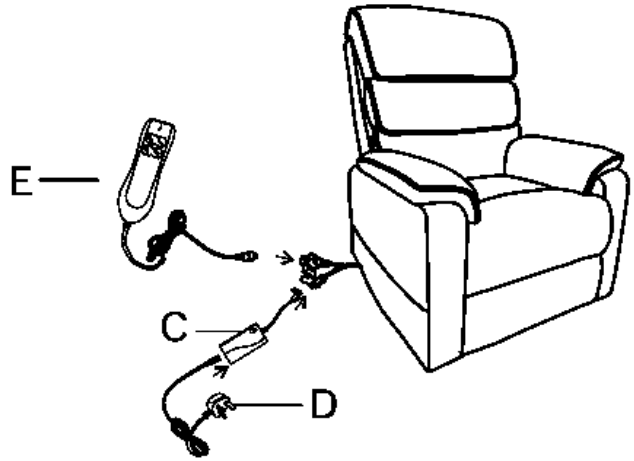

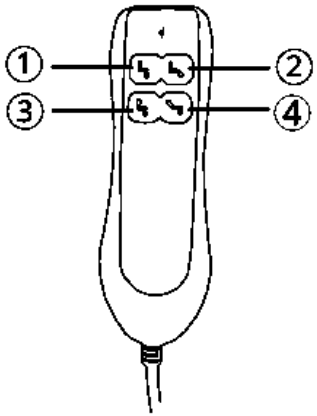


1.Press the botton ① to open the footrest.If the chair is in lifting position,press button ① will lower down the chair to the seating position.

2.Press the botton ② to retract the footrest,when the footrest is fully retracted, keep press the botton ② will make the chair Rise to lifting position

3.Press the botton ④ to recline backrest to a comfortable position.

4.Press the botton ③ to retract backrest to sitting position.

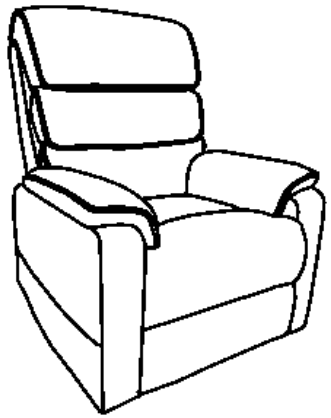

KY588 TWIN MOTOR RECLINER

Thank you for your purchase. The following care instructions will allow you to make the most of your chair; helping to prolong the look and life of it by preventing wear and damage.

IMPORTANT INFORMATION

PLEASE ENSURE YOU READ THIS LEAFLET BEFORE USING YOUR CHAIR. DO NOT DISCARD OF ANY PACKAGING UNTIL YOU HAVE CHECKED THE PRODUCT THOROUGHLY.

CARING FOR YOUR CHAIR

- Pre-brush fabric with a soft brush and then gently vacuum.
- Plump any accent/removable cushions regularly to prevent them becoming mis-shaped or flat.
- Use a microfibre cloth to remove dust from wooden surfaces.
- In the event of a spill or stain, use specialist upholstery cleaner or cleaning services.

SUNLIGHT AND HEAT DAMAGE

- Avoid contact with direct sunlight. If needed move items or change their position to avoid the same area being exposed to repeated sunlight/heat.
- Do not place your chair close to fire places and/or radiators.
- Hot objects such as mugs/plates can permanently mark the fabric and wood, avoid placing these on the chair.